



Simplex[®] Lock Quick Reference

Models: PS1210HD, PS1210EZ and HAS410

Read Contents Carefully For Trouble-Free Operation of Your Safe

Dear Valued Customer:

Congratulations on your purchase of the finest safe from American Security Products, Co.

You've taken an important step in organizing and protecting your most valued possessions. Every AMSEC safe is professionally hand-crafted and designed to provide a lifetime of trouble-free performance.

AMSEC offers the industry's finest warranty backed by a nationwide network of highly skilled authorized dealers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized AMSEC dealer or AMSEC's Service Department if you have any questions.


Please also take the time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, Congratulations and Thank You for selecting AMSEC!



AMERICAN SECURITY PRODUCTS CO.
11925 Pacific Ave., Fontana, CA 92337
951-685-9680
www.amsecusa.com

Revised 6/15

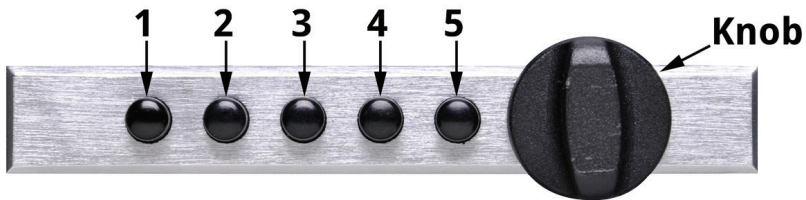

Your Simplex Lock is presently set with a combination of: First push #2 and #4 together, and then #3. Make a habit of turning the knob **LEFT** (counter-clockwise) before pushing the combination. Should anyone have attempted an improper combination, this action clears off such an attempt and reactivates the buttons.

TO OPEN:

- 1) Turn knob **LEFT** (counter-clockwise) to active all buttons.
- 2) Push proper buttons in present order for the combination.
- 3) Turn knob **RIGHT** (clockwise) to open.

TO LOCK:

Turn knob **LEFT** (counter-clockwise) until it stops.

TO CHANGE YOUR COMBINATION:


You may easily change to a new combination, using one, all five, or any number of buttons you wish in any order. Two or more buttons may be pushed at one time as part of your new combination. Simple two and three button combinations are easy to remember and still provide top security. Note: a particular button can be pushed only once in establishing a new combination. **RECORD YOUR NEW COMBINATION WHERE INDICATED IN THIS DOCUMENT AND KEEP IN A SAFE PLACE.**

- 1) Open the door or drawer and **relock your lock.**
- 2) Press the correct buttons in the proper order for your **EXISTING** combination.
- 3) On the inside of the safe, pull back the protective foam as shown in the photo to the right. There is a combination change button located on the inside of the door. Push until you hear a click.



NOTE: For HAS410 series safes, there is a combination change button located on the inside of the door as shown.

- 4) Turn the knob **LEFT** (counter-clockwise) to 'clear-out' the existing combination.
- 5) Press the buttons firmly and deliberately in the desired sequence for your new combination.
- 6) Turn the knob to the **RIGHT** (clockwise) to set your new combination into the mechanism.

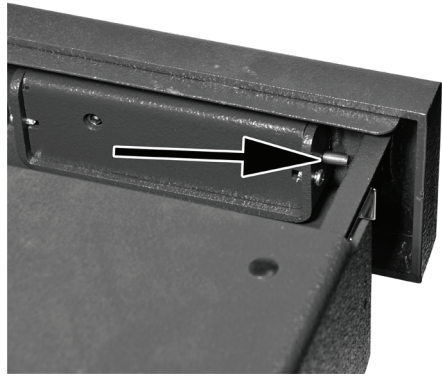

HAS410 Combo Change Button

Turn the knob full **LEFT** to lock the lock. Your new combination is now installed.

NOTE: Ensure combination is tested several times with the lid open to confirm combination is properly set.

Record New Combinations Here:

- 1) _____
- 2) _____
- 3) _____
- 4) _____
- 5) _____
- 6) _____
- 7) _____
- 8) _____